

Example settings for the X axis

XS0
 1/8th Step
XS1
 Not Installed
 Installed

XS0
 1/4 Step
XS1


XS0
 1/2 Step
XS1


XS0
 Full Step
XS1
